VC73230MUK Rev3 reformatted_Instruction Booklet 21/02/2011 16:44 Page 1

morphy richards®

Register online for your 5 year guarantee. See back of this instruction book for details.
(UK and Ireland customers only)
www.morphyrichards.co.uk

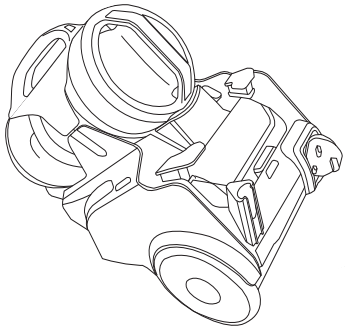

Bagless Cylinder Never Loses Suction* Compact Vacuum Cleaner

Please read and keep these instructions

Getting the best from your new cleaner...

If your cleaner is not picking up as well as it should, please check

Filters

Whenever the dust canister is emptied, check the filters and clean if necessary.

Blockages

If performance is reduced and the dust canister and filters are clean, check the nozzle, tubes and hose for blockages.

Safety cut-out

If the airflow is blocked or the filters are not regularly cleaned, the safety cut-out feature may be activated. Allow 60 minutes for the thermostat to reset before switching the appliance back on. See page 7 for further instructions.

*Tested in accordance with IEC 60312-1: 2010. Maintain as per these instructions.

CE

VC73230MUK Rev3

For competitions, product hints and tips and much more, join us online at our blog, Facebook or Twitter pages.

www.homeofthehouseproud.com
www.facebook.com/morphyrichardsuk
www.twitter.com/loveyourmorphy

If you have a problem or complaint, please call our dedicated UK based helpline before returning your product to the retailer from where it was purchased.

UK Helpline: 0844 871 0960
Replacement Parts: 0844 873 0726
Ireland Helpline: 1800 409 119

For details of other Morphy Richards products, plus replacement parts and accessories, please see our website: www.morphyrichards.com

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance.

Please read these instructions before using the cleaner.

Location

- Do not use or keep this product outside.
- Do not store the appliance near hot surfaces eg. ovens or heating appliances.

Mains lead

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged, the cable assembly must be replaced. Do not attempt this task yourself, contact the helpline number that is found at the bottom of the page.

Personal safety

- **WARNING: Keep loose clothing, hair, fingers etc. away from the nozzle whenever the cleaner is connected to the mains.**
- **WARNING: Only lift the product by the handle ❹.**
- **WARNING: Disconnect from the mains supply before carrying out any routine maintenance, such as cleaning any blockages, changing any filters or accessing the floor nozzle.**
- Always disconnect the appliance from the mains supply after use.
- Never use in the presence of explosive liquid or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Never touch the plug or cable with wet hands.
- Do not immerse cord, plug or cleaner in water or other liquid.
- The appliance must never be left running unsupervised.
- This appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Product safety

- Never use the appliance without the filters being installed.
- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Use only Morphy Richards spare parts and accessories.
- Never modify the cleaner in any way.
- Repairs to electrical appliances are only to be undertaken by trained professionals. Unprofessional repairs can be dangerous for users.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Children should be supervised to ensure that they do not play with the appliance, or stumble over the power cord.

ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

If you cut off the plug and let go of the cable, it will rewind into the machine, therefore you must pull out a length of cable and secure it before cutting the plug off and re-fitting a new one.

WARNING: A damaged or severed mains cable fitted with a plug should never be connected to the mains supply. It must be destroyed, as a damaged cable becomes hazardous if connected to a power socket.

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

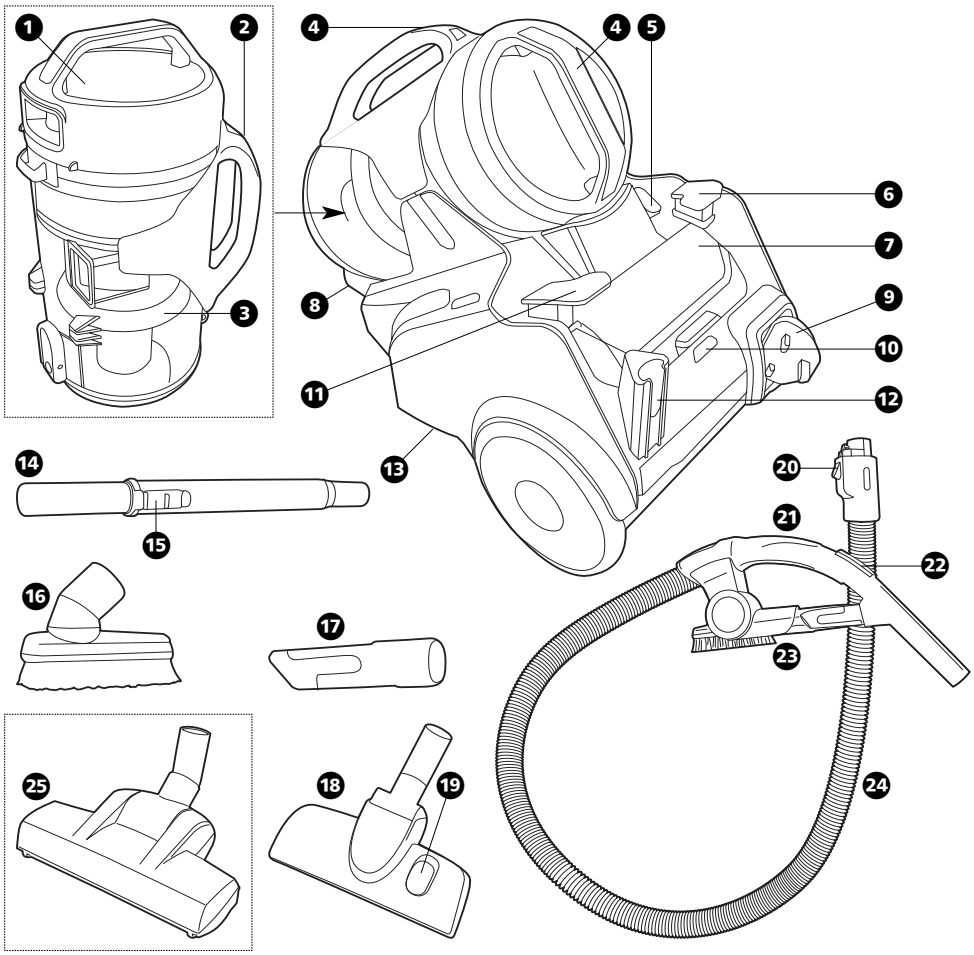

FEATURES

1. Dust canister
2. Dust canister empty button
3. Dust canister screen filter
4. Dust canister handles
5. Dust canister release button
6. Automatic cable rewind switch
7. Pre motor filter cover
8. Hose inlet
9. Power plug and cable
10. Pre motor filter cover release slider
11. On/Off button
12. Tube standby slot
13. Exhaust filter cover

Accessories

14. Metal telescopic tube
15. Telescopic tube release button
16. Dusting brush
17. Crevice tool
18. Combination floor nozzle
19. Brush adjustment switch
20. Hose connector release button
21. Hose handle
22. Suction control
23. On-handle tool storage (for 16 & 17)
24. Hose
25. Turbo nozzle (certain models only)

Standard accessories	Application	
		Textiles and upholstery
		Shelves and hard surfaces
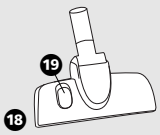 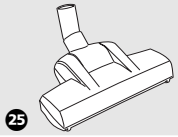		Carpets and other textile floor coverings (brushes up on combination floor nozzle)
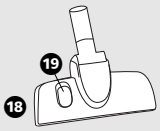		Settings for heavy dirt and smooth floors (brushes down on combination floor nozzle)

TOOLS AND ACCESSORIES

Telescopic tube

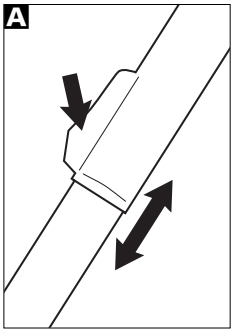

Attach the telescopic tube ⑭ to the handle end ㉑ of the hose. Extend the telescopic tube to the required length by pressing down the tube release button and pulling out the tube **A**. Attach the required accessory to end of the tube.

Combination floor nozzle ⑱

This nozzle is suitable for general purpose cleaning on a wide variety of floor coverings.

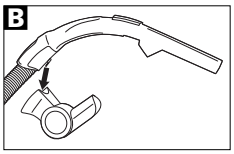

Turbo nozzle ㉕
(certain models only)

This nozzle is suitable for cleaning and rejuvenating cut pile carpets and is ideal for picking up stubborn dirt and pet and human hairs.

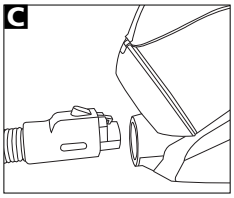

Cleaning the turbo nozzle ㉕
(certain models only)

The turbo nozzle should be regularly cleaned and any hairs or fibres wrapped around the brush bar removed to maintain optimum performance.

Other accessories include:

- **Dusting brush ⑯** for pelmets, delicate objects etc.
- **Crevice tool ⑰** for awkward places, corners and behind radiators etc.

Tool storage B

The crevice tool and dusting brush can be stored on board the hose handle for added convenience.

The on-handle tool storage ㉓ may be removed if not required. Push the on-handle tool storage backwards towards the hose and pull away **B**.

OPERATING THE APPLIANCE

ASSEMBLY

Suction hose C

Push the 360° rotating head on the suction hose into the suction hose inlet ⑧ on the vacuum cleaner.

To remove, press the hose connector release button ⓴ on the hose and pull out.

The appropriate cleaning tool can be attached directly to the suction hose handle or the extension tubes can be used between the suction hose handle and the tool.

Switching on

Always pull out the supply cable to its maximum length. Plug the appliance into the mains supply.

Push the Power ON/OFF switch ⓫ to start the motor.

IMPORTANT: Ensure that the appliance is never left unattended whilst it is switched on.

Controlling suction power

The suction power can be adjusted using the airflow control on the handle ㉑ D.

Closed: full suction
Open: reduced suction

Switching off

Switch off the appliance. Remove the plug from the mains supply and rewind the power cable using the cable rewind switch ❻.

WARNING: When using the cable rewind, always hold the plug as the cable will rewind quickly.

STORAGE

NOTE: Always store the vacuum cleaner base down.

Tube park

During short breaks in cleaning, the tubes can be held in an upright, 'standby' position. Rotate the floor nozzle until the lug on the neck can be fitted into the tube standby slot ⓬ on the rear of the appliance E, whilst you move furniture for instance.

D

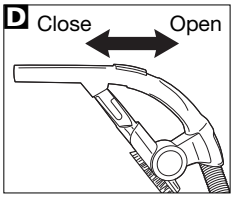

MAINTENANCE

DUST CANISTER

Emptying

To obtain the best results from your cleaner, empty the dust canister ❶ regularly, otherwise the airflow and cleaning power will be reduced.

E

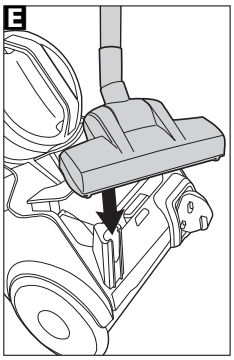

1 Unplug the cleaner from the mains outlet.

2 Press the dust canister release button ❺ and pull the canister away from the main body F.

3 Take the canister to a dustbin.

4 Hold the dust canister over the dustbin. Press the dust canister empty button ❷ on the side handle ❹ of the dust canister. This opens the door at the base of the canister for the contents to be emptied-out.

5 Re-attach the dust canister to the main body.

ALLERGY SUFFERERS

When emptying any vacuum cleaner, it is difficult to avoid exposure to dust. To minimise this risk, please ensure that you encase the dust canister in a large bag to empty it. Close the bag as tightly as possible round the dust canister. Remove the dust canister and close the bag as tightly and quickly as possible and dispose of this immediately. It is advisable to wear disposable gloves and a face mask while emptying the cleaner. If at all possible, ask a non allergy sufferer to empty the dust canister when required.

F

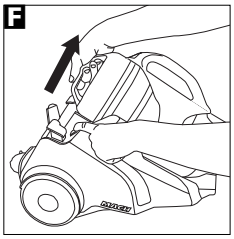

G

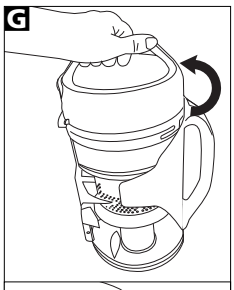

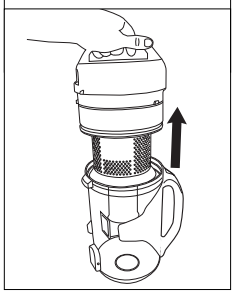

H

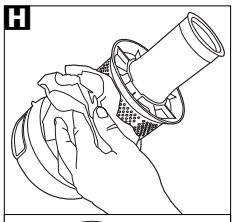

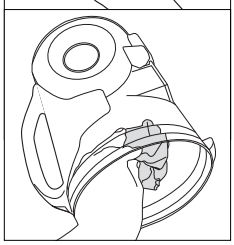

I

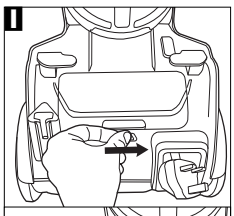

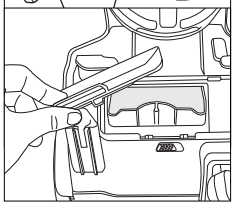

FILTERS

Cleaning the dust canister screen filter

The dust canister screen filter ❸ should be cleaned every time the dust canister is emptied.

1 Follow steps **1-4** of 'Emptying the Dust Canister'.

2 Rotate the lid of the dust canister anti-clockwise and lift away from the canister G.

3 Using a soft brush and a damp cloth, wipe the dust canister filter and the dust canister clean H.

IMPORTANT: Ensure screen filter is **left to thoroughly air dry before re-use**.

IMPORTANT: Do not wash filters with detergents.

IMPORTANT: Do not use heated appliances to dry filters.

4 Re-attach the lid to the dust canister and re-attach the assembly to the main unit.

Changing/cleaning the motor protection filter

The motor protection filter must be checked and, if necessary, cleaned every time the dust canister is emptied.

IMPORTANT: Never use the appliance without the motor protection filter installed, otherwise damage to the motor may occur which would not be covered by the guarantee.

This filter is located beneath the On/Off button ⓫ and the automatic cable rewind button ❻ on the rear of the unit.

1 To access the pre-motor filter, slide the filter cover release slider ⓾ to the right and lift off the filter cover ❼ I.

2 Lift out the filter by pulling the tab towards you J.

3 Remove the foam filter from its housing K.

4 To clean, shake or brush the filter over a dustbin. The filter may also be washed **but must be left to thoroughly air dry before re-use**.

IMPORTANT: Do not wash filters with detergents.

IMPORTANT: Do not use heated appliances to dry filters.

5 Return the motor protection filter to its housing and replace back into the vacuum cleaner, ensuring the motor protection filter cover is securely in place.

Changing/cleaning the exhaust filter

The exhaust filter must be checked and, if necessary, cleaned every time the dust canister is emptied.

The exhaust filter is located on the base of the vacuum cleaner.

1 Rotate the lock on the exhaust filter cover ⓭ clockwise, and detach the cover L.

2 Pull the tab towards you to remove the exhaust filter M.

3 To clean, shake or brush the filter over a dustbin. The filter may also be washed **but must be left to thoroughly air dry before re-use**.

IMPORTANT: Do not wash filters with detergents.

IMPORTANT: Do not use heated appliances to dry filters.

4 Replace the filter back into the main unit and reattach the cover, securing by rotating the lock anti-clockwise.

SAFETY CUT-OUT

If the cleaner overheats, a motor protection thermostat will automatically switch the motor off. If this happens, switch the cleaner off, unplug from the power supply and leave the cleaner to cool for at least 60 minutes. Check the airways for blockages, empty the dust canister and clean the filters before restarting.

HINTS AND TIPS

Cleaning and maintenance

Unplug from the mains supply before cleaning. The vacuum cleaner, especially the dust compartment and all accessories, can be cleaned using a damp cloth or a non-abrasive domestic cleaner and wiped dry.

To keep the underside of the combination floor nozzle clean, vacuum it at regular intervals using the crevice tool.

Purchasing filters

Use only genuine replacement filters which can be purchased from specialist retailers or by calling our helpline number.

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

UK Helpline **0844 871 0960**

Replacement Parts **0844 873 0726**

Ireland Helpline **1800 409 119**

WEBSITE

You may also contact us through our website, or visit the site to browse and purchase appliances, spare parts and accessories from the extensive Morphy Richards range.

www.morphyrichards.com

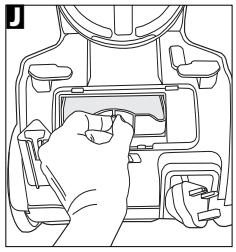

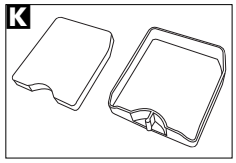

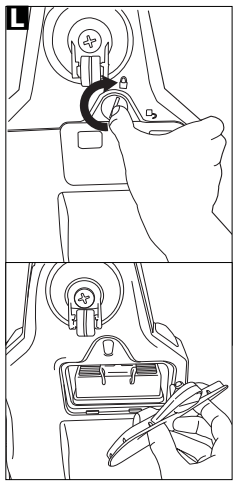

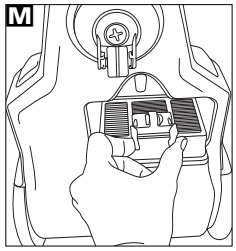

For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

REGISTERING YOUR FIVE YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 3 years when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years. To validate your 5 year guarantee, register with us online at **www.morphyrichards.co.uk**
Or call our customer registration line
UK: 0844 871 0962
IRE: 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually.

Please note that the 5 year guarantee is only available in the UK and Ireland. Please refer to the 2 year guarantee for more information.

YOUR ONE YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If you suspect a fault, follow the simple checks detailed below before retrying the appliance or calling the helpline.

- Check the filters for blockages.
- Check the tools / tubes for blockages.
- Check the plug is firmly in the socket.
- Check the socket is working by trying another appliance.
- Check the fuse in the plug.

If, for any reason, this item is replaced during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.

2 The appliance has been used on a voltage supply other than that stamped on the products.

3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

4 The appliance has been used for hire purposes or non domestic use.

5 The appliance is second hand.

6 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

7 The guarantee excludes consumables such as some filters.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0960
Spare Parts 0844 873 0726
Republic of Ireland 1800 409 119

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

VC73230MUK Rev3 09/11

For details of other Morphy Richards products, plus replacement parts and accessories, please see our website: **www.morphyrichards.com**